



OPTIKAM FRAME SELECTOR KIOSK

User Manual

Optikam Frame Selector Kiosk



(OPTI-v8)

Optikam Tech Inc.
787 Liege Street West,
Montreal, QC
Canada, H3N 1B1

Phone 514-667-4178
Toll Free: 888-356-3311

Table of Contents

C H A P T E R 1

INITIAL SETUP

| | |
|----------------------------|---|
| Initial Setup | 1 |
| Powering the System | 2 |
| Adjusting the Camera | 2 |
| Adjusting the Display | 2 |
| Connecting to the Internet | 3 |

C H A P T E R 2

OPTIKAM INTERFACE

| | |
|----------------------------|----|
| Optikam Interface Overview | 5 |
| Taking Pictures | 6 |
| Zoom Feature | 7 |
| Full-Screen Mode | 7 |
| Clearing All Pictures | 8 |
| Step-By-Step Guide | 8 |
| Emailing Pictures | 8 |
| Printing Pictures | 8 |
| Color Contact Lens | 9 |
| Lens Module | 11 |

C H A P T E R 3

SALESPERSON FUNCTIONS

| | |
|--------------------------------|----|
| Salesperson Functions Overview | 13 |
| Save Customer | 14 |
| Load Customer | 16 |
| Marketing Emails | 18 |
| Appointments | 19 |
| System Configuration Window | 20 |
| Set Logos | 22 |
| Set Advertising | 23 |

C H A P T E R 4


TROUBLESHOOTING

| | |
|--------------------------|----|
| Camera Is Not Detected | 25 |
| Optikam Does Not Turn ON | 26 |
| Forgot Password | 26 |
| System Stops Responding | 26 |
| Touch-screen Not Working | 26 |

Chapter 1

Once the Optikam kiosk has been unpacked, three simple steps prepare Optikam for first use.

 - Power the System
- Adjust the Display
- Adjust the Camera (Plastic Covering)

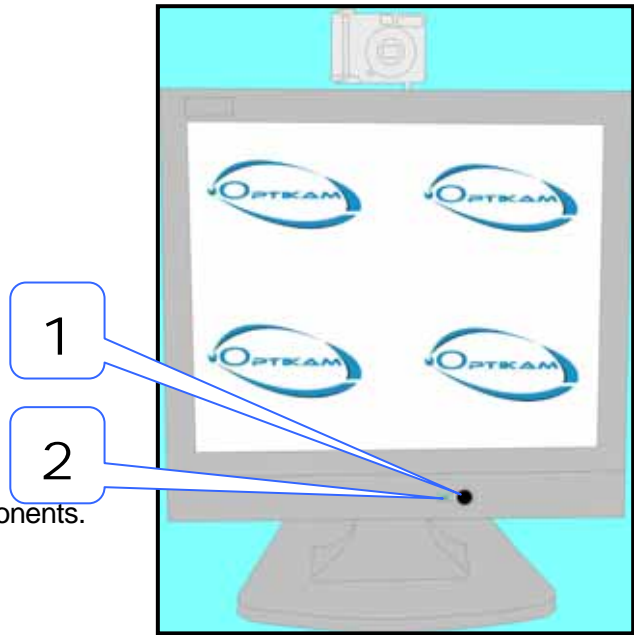


The picture on the right illustrate Optikam's main components.

1. Optikam Power Button
2. Optikam Power Light

1.1 Powering the System

To power up the system:

 
1. Verify that the 'Optikam Power Light' [3] is lit red.
2. Press the 'Optikam Power Button' [2].
The 'Optikam Power Light' [3] should now turn green.
3. Press the 'Camera Power Button' [1].
The light on top of the Camera should now turn green.(Automatically powered)
4. Wait for the system to display four logos.

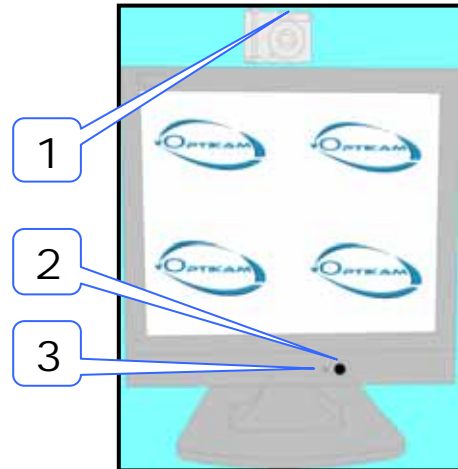

1.2 Adjusting the Display

To adjust the Optikam kiosk display position:

 1. Hold the Optikam kiosk display in the locations marked by the blue arrows in the picture on the right.
2. Pivot the display around the pivot point indicated by the red arrows in the picture on the right until the desired position is achieved.

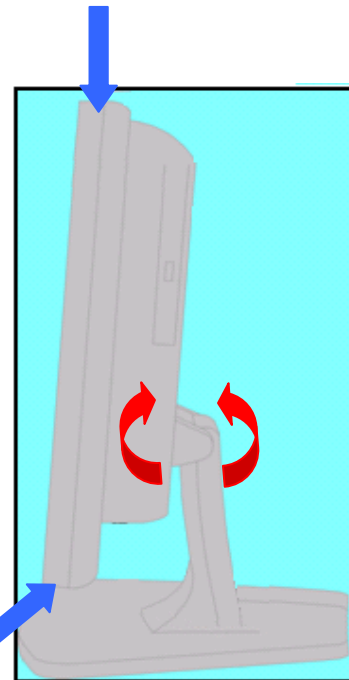

1.3 Adjusting the Camera

To perform the initial camera adjustment:

1. Start a live video session by touching any logo.
2. Touch the 'Zoom -' button until the zoom factor is 1:1.
3. Move the camera up and down using both hands. (Using plastic cover)
4. Adjust the camera so that the top of the monitor is not part of the picture.

1.4 Connecting to the Internet

The Optikam system may be connected to the internet through a wired or wireless connection.

Wired Connection

To connect the Optikam system with a wired connection, insert an Ethernet cable into the jack indicated below.



Wireless Connection [optional feature]

If your Optikam system was purchased with a Wireless Router, refer to the installation documentation included with the router. If you are using your own wireless router, your SSID, network security type and network key need to be entered through the “Configure Internet Connection” button in the System Configuration window.

If your network assigns IP addresses automatically, no further configuration is needed. For more advanced network settings, such as static IP assignment and gateway configuration, use the “Configure Internet Connection” feature in the System Configuration window.

Firewall Configuration

If a two-way firewall has been implemented on your network, the Optikam requires the following websites to be opened:

Internet connection and online upgrades:

www.google.com
www.optikam.com

Remote support:

TCP Port 1328

Email capability:

TCP Port 587

 
Printer Installation

To install a printer, touch the "Add a printer" option in *Configure Centration Settings* from the *System Configuration* window. When installing a network printer, the network's Workgroup name may need to be set in the *Configure Centration Settings* window.

 
Note: Domain networks are not supported and cannot be used to add a networked printer.





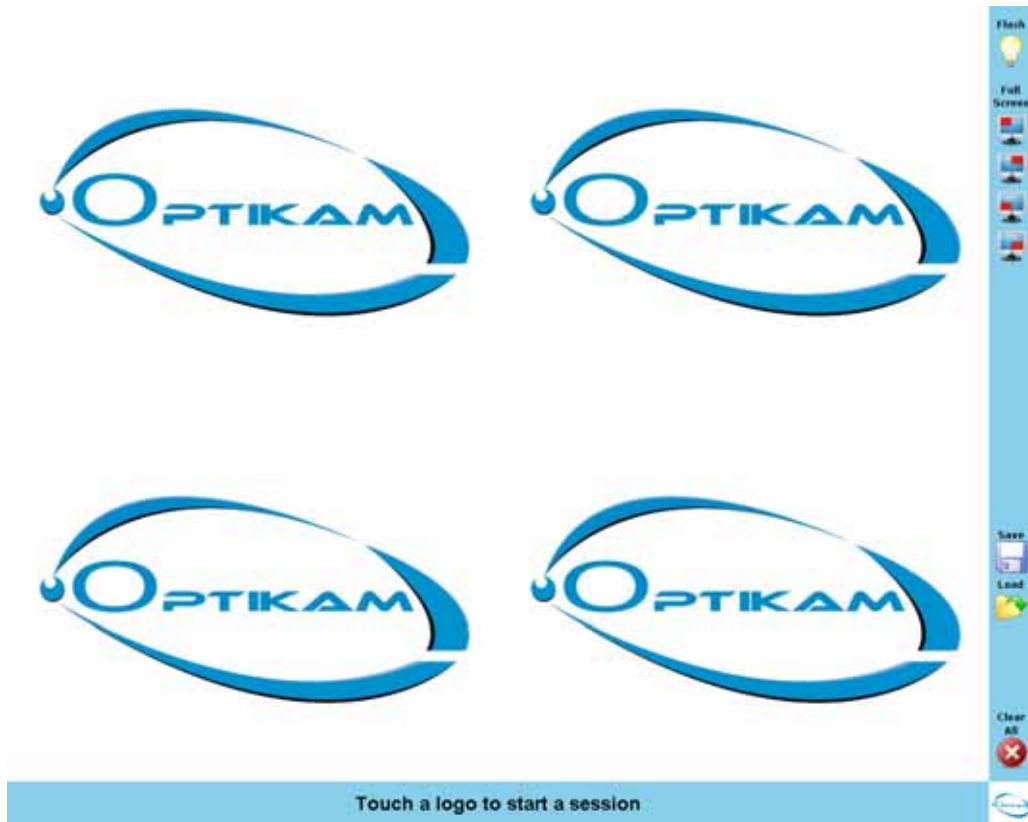



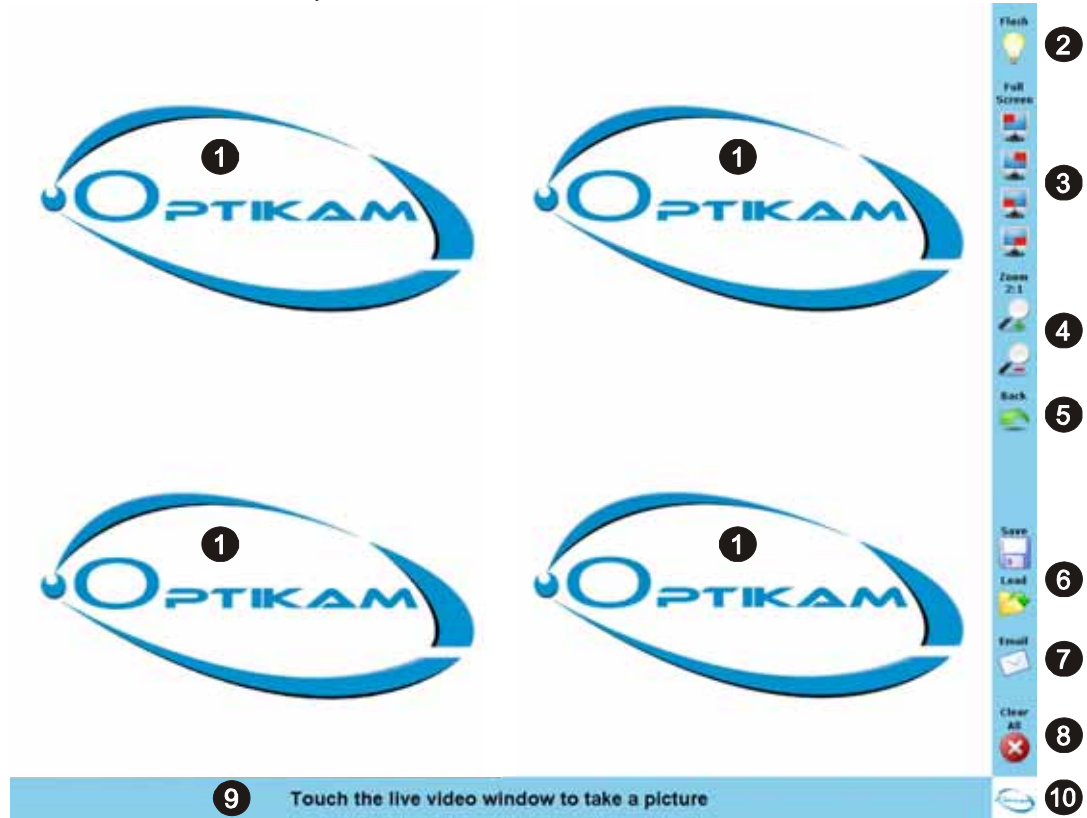


Chapter 2

This section describes the main features and interface of the Optikam system.




The following screenshot shows the main Optikam interface.



- 1** Four Picture Placeholders
Touch a logo to start a video feed and once more to take a picture
- 2** Flash Button 
Turn on and off the camera flash
- 3** Full-Screen Buttons 
Select one of the four pictures to be enlarged to full-screen
Printing is done in full-screen mode by touching the print icon 
- 4** Zoom In  Zoom Out 
Zoom In and Out from 1:1 to 4:1 before taking a picture
- 5** Back Button 
Restore picture replaced by live video feed
- 6** Save  Load 
Store customer pictures and retrieve them during another visit (hold buttons for 3 seconds)
- 7** Email 
Email pictures to customer
- 8** Clear All 
Clears all pictures being displayed and restores default zoom
- 9** Step-by-step Guide
Text guiding the customer along
- 10** Setup Menu 
Holding the Optikam logo for 3 seconds accesses the setup menu

2.1 Taking Pictures

 When the Optikam kiosk is turned on, the system displays four quadrants with the Optikam logo. Each quadrant is a placeholder for a picture.

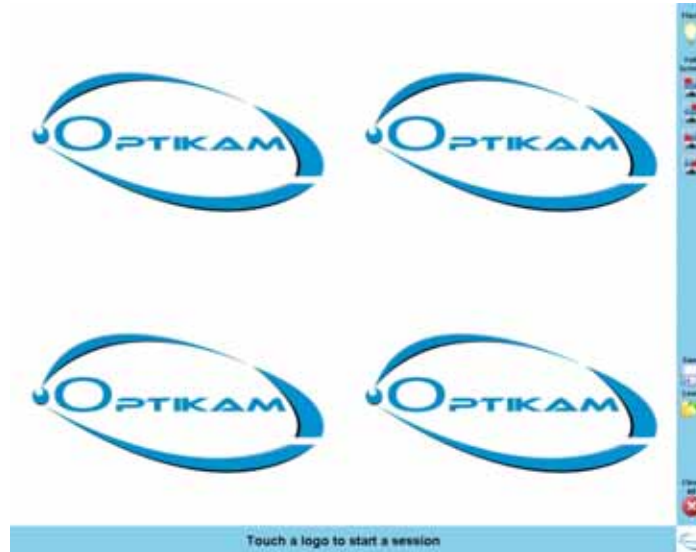

With the use of the touch-screen, touch any one of the four quadrants to start a video session in that location. To stop the video and take a picture, touch the live video then hold still for a few seconds while the picture is taken.



Pictures can continue to be taken by touching the other quadrants. Up to four pictures are visible at any time. Touching a quadrant that currently displays a picture will replace it with another picture. The camera flash can be turned on or off by touching the *Flash* button located on the right side of the screen.

2.2 Zoom Feature

Zooming is accomplished by touching the *Zoom* buttons located on the right side of the screen. The Zoom values range from 1:1 to 4:1. The Zoom buttons are used during the live video feed and allow for extreme close-ups of a frame. When the pictures are cleared, the zoom setting automatically is reset to its original value.



 
2.3 Full-Screen Mode

The customer can enlarge any specific picture by touching the *Full-Screen* buttons located on the right side of the screen. Returning to split-screen mode is accomplished by using the *Split-Screen* button.



2.4 Clearing All Pictures

Clearing all of the pictures is accomplished by touching the *Clear All* button at the bottom-right corner of the screen. The system returns to its original state.

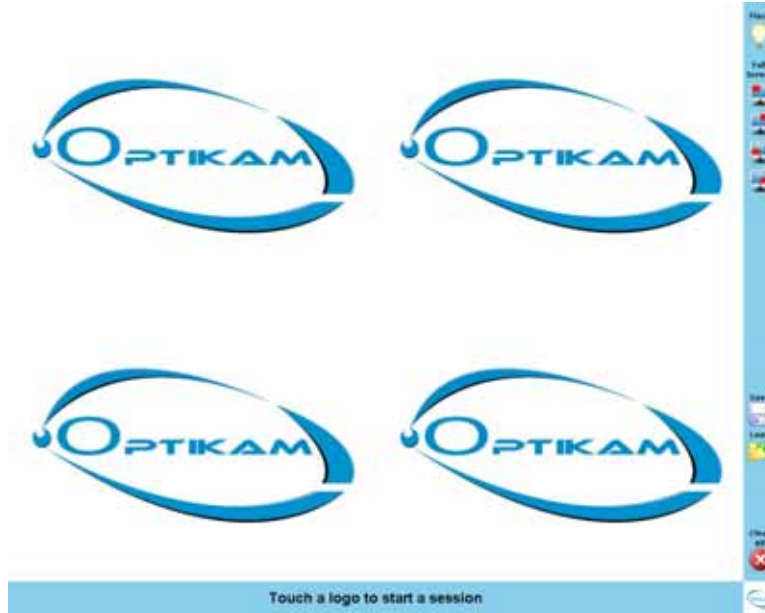

2.5 Step-by-Step Guide

Text at the bottom of the screen guides customers through the picture taking process. This easy-to-use guide allows Optikam to be used as a standalone kiosk.

Enlarge your picture by touching the  buttons to the right

2.6 Emailing Pictures

When an internet connection is available, pictures can be sent by email. Pictures are emailed by pressing the *Email* button located on the right side of the screen. When in split-screen mode, all pictures will be emailed. The user may email a specific picture by first entering *Full-Screen* mode and then pressing the *Email* button. The user will be prompted for an email address and a confirmation window will follow.

2.7 Printing Pictures

This feature is only available if your Optikam system was purchased with the printer module. Printing pictures is done in Full-Screen mode. Touching the *Print* button in Full-Screen mode will print the currently displayed picture. Text containing your company name, address and phone number can be customized in the System Configuration Window.

2.8 Color Contact Lens



The color contacts feature is available in Full-Screen mode. Touching the *Contacts* button in Full-Screen mode will display the following screen.



Quick Color Contact Lens Steps

 
1. Touch the *Left Eye* checkmark to place the left eye placeholder. A Green circle will appear displaying the left eye placeholder.
2. Touch anywhere on the picture to move the circle.
3. Once placed, you can fine-tune the circle's placement by either dragging anywhere on the picture or by using the *Position* arrows.

4. You can increase or decrease the circle's circumference by using the *Size +* and *-* buttons.
5. You can also adjust for someone's eye lids being partially closed with the *Top* and *Bottom +/-* buttons.
6. Once done, do the same for the right eye by touching the *Right Eye* checkmark. The right eye will automatically be sized the same as the left eye and its vertical placement will be the same to save the user some time.
7. Once done with the right eye, touch the *Color Contacts* checkmark and start selecting a *Brand* and *Color*. You may also select "Preview All" under *Brands* to automatically rotate between all colors. To stop on a color, simply touch anywhere on the screen.
8. On the right of the window, you will find 4 screen icons. These are used to replicate a picture with different color contact selections so that they can be viewed side-by-side when in split-screen mode.
9. You may zoom in to make the placement easier. The zoom icon with the green arrow performs a maximum zoom-in and the zoom icon with the red X performs a maximum zoom-out.
10. Touching the green checkmark returns to split-screen mode where the simulated color contacts pictures can be emailed or saved.

2.9 Lens Module



Touching the *Lens* button in Split-Screen mode will display the following screen.

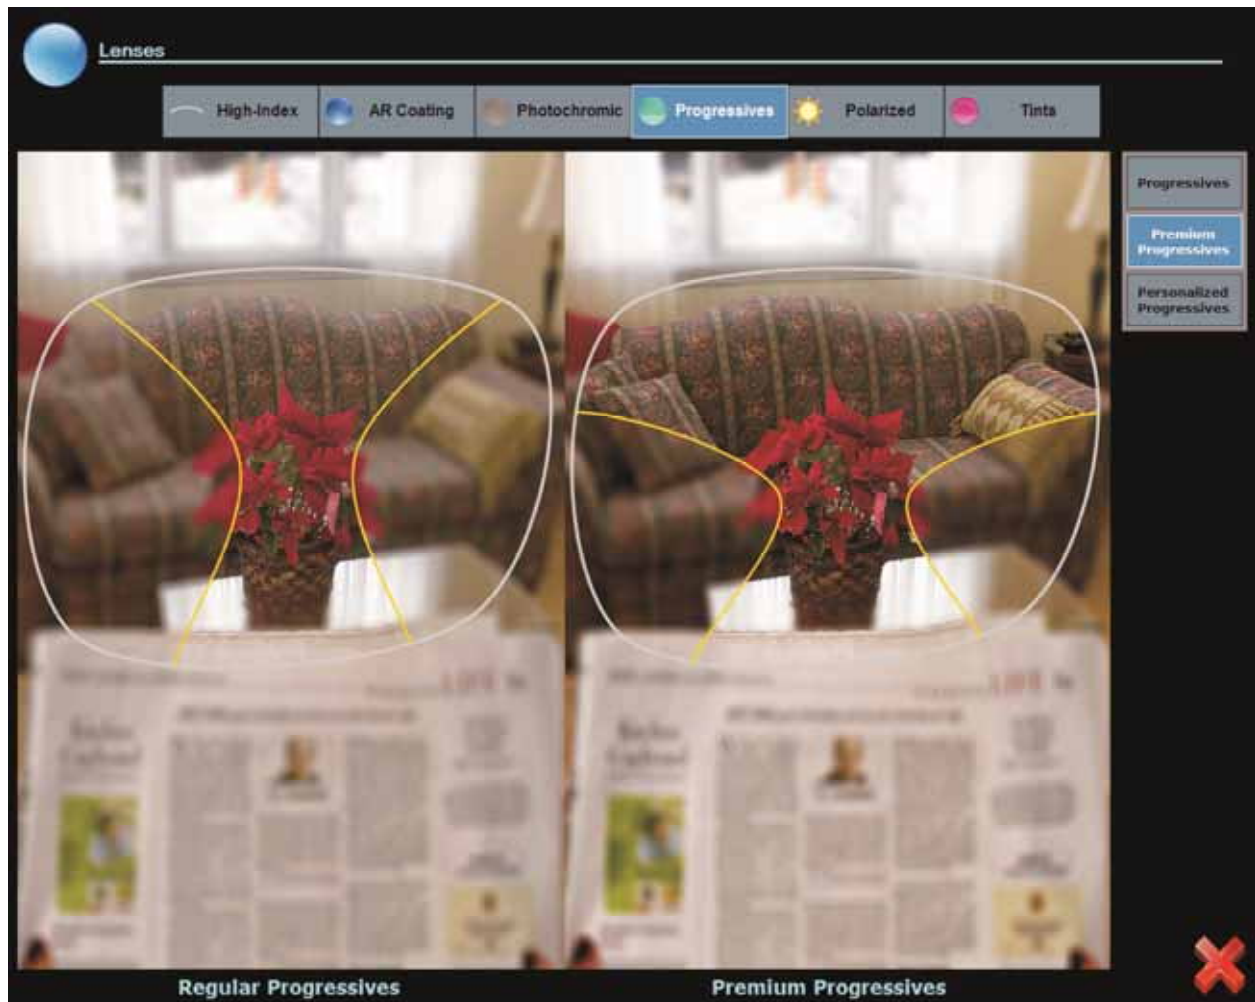

The Lens module allows you to visually show the benefits of High-Index lenses, AR coating, Photochromic lenses, Progressives, Polarization and Tints in under 3 minutes. These quick demonstrations eliminate the need for paper literature and are much more effective in educating the patient.

Lens Module Demonstrations:

High-Index

The high-index demonstration shows the difference between regular lenses and high-index lenses. A profile picture displays the thickness change and a frontal picture demonstrates the refractive effect on the eyes. The customer's prescription can be changed by touching the + and – buttons on the left of the screen.

AR Coating

The AR Coating demonstration shows the benefits of Anti-Reflective coating. The customer is quickly shown the effect of AR Coating on themselves and when driving.

Photochromic

The Photochromic demonstration shows the advantage of photochromic lenses in 3 different lighting conditions.

Progressives

The Progressives demonstration shows the benefits of progressive lenses over single-vision and bifocals.

Polarized

The Polarized lenses demonstration shows the benefits of polarized lenses over regular lenses. The customer is quickly shown various settings in which polarized lenses are beneficial.

Tints

The Tints demonstration allows customers to view various solid and gradient color tints. The customer is quickly shown what effect the tint will have to their sight and informs customers on the benefits of each tint color.

Chapter 3


The features described in this section are intended only to be used by the sales staff. To prevent accidental use by the customer, these features require the salesperson to hold buttons to these features for 3 seconds in order to access the feature. Also, the Load Customer and System Configuration features are password protected. The default system password is 'optikam'.

The salesperson functions are:

- **Save Customer:** Save customer pictures, description text and customer profile.
- **Load Customer:** Retrieve customer pictures during a future visit.
- **System Configuration Window:** Customize the functionality of the Optikam system.


3.1 Save Customer

Holding the Save button for 3 seconds and releasing accesses the Save Customer feature. The salesperson is prompted to enter the customer name. A customer name must begin with a letter and must not be currently in use.




Save Customer

Jane




Email
jane@hotmail.com





Set Appointment Date


Include In Marketing List

Save As Demo









Model A211

Touch a picture to include it in the advertisement.
Touch the text below a picture to modify it.



Customer Profile




Category

Coating

Lens

Prescription



Visit Type







Options

Bifocal

Multifocal

14

Email Address

The customer's email address can be saved by touching the Email button.

Set Appointment Date

An appointment date and time can be set by touching the *Set Appointment Date* button. Reminder emails can be sent to clients before their appointment from the Load Customer window.

Receive Promotional Email / Include In Marketing List

When selected, the customer has agreed to receive marketing material by email. The customer marketing list allows mass-marketing emails to be sent to your customers.

Save As Demo

When selected, the saved pictures will be included in the Demo list. Demos are never deleted and allow you to show your customers various optional services. Some examples are pictures with and without AR coating, Bifocals vs. non-Bifocals and displaying various lens thicknesses.

Description Text

Touching the text below each picture allows a description to be attached to that picture.

Advertisement Pictures

Touching each saved picture will include that picture in the advertisement. Touching the picture again will remove the picture from the advertisement. A red frame around a picture indicates that it is set to be part of the current advertisement. Touching a saved picture for 3 seconds will make that picture the exclusive picture in the advertisement. An exclusive advertisement picture is indicated by a blue frame. Only one picture at a time can be an exclusive advertisement picture. Touching another saved picture for 3 seconds will automatically unselect any previous exclusive picture and make the touched picture the new exclusive picture.

Customer Profile

A customer profile can be created through the use of two lists, Category and Options. To create a customer profile, simply select the category from the left list and touch the appropriate option to include it as part of the customer's profile. Options are unselected by touching the option a second time.

 
Categories and options can be quickly created by touching the "+" button below the Category and Options lists. Categories and options are removed by touching the "X" button.

Saving The Customer

Pressing the green checkmark saves all the pictures and customer profile in memory.

3.2 Load Customer

Holding the Load button for 3 seconds and releasing accesses the Load Customer feature. The salesperson is prompted to enter the system password before the Load Customer feature can be accessed.

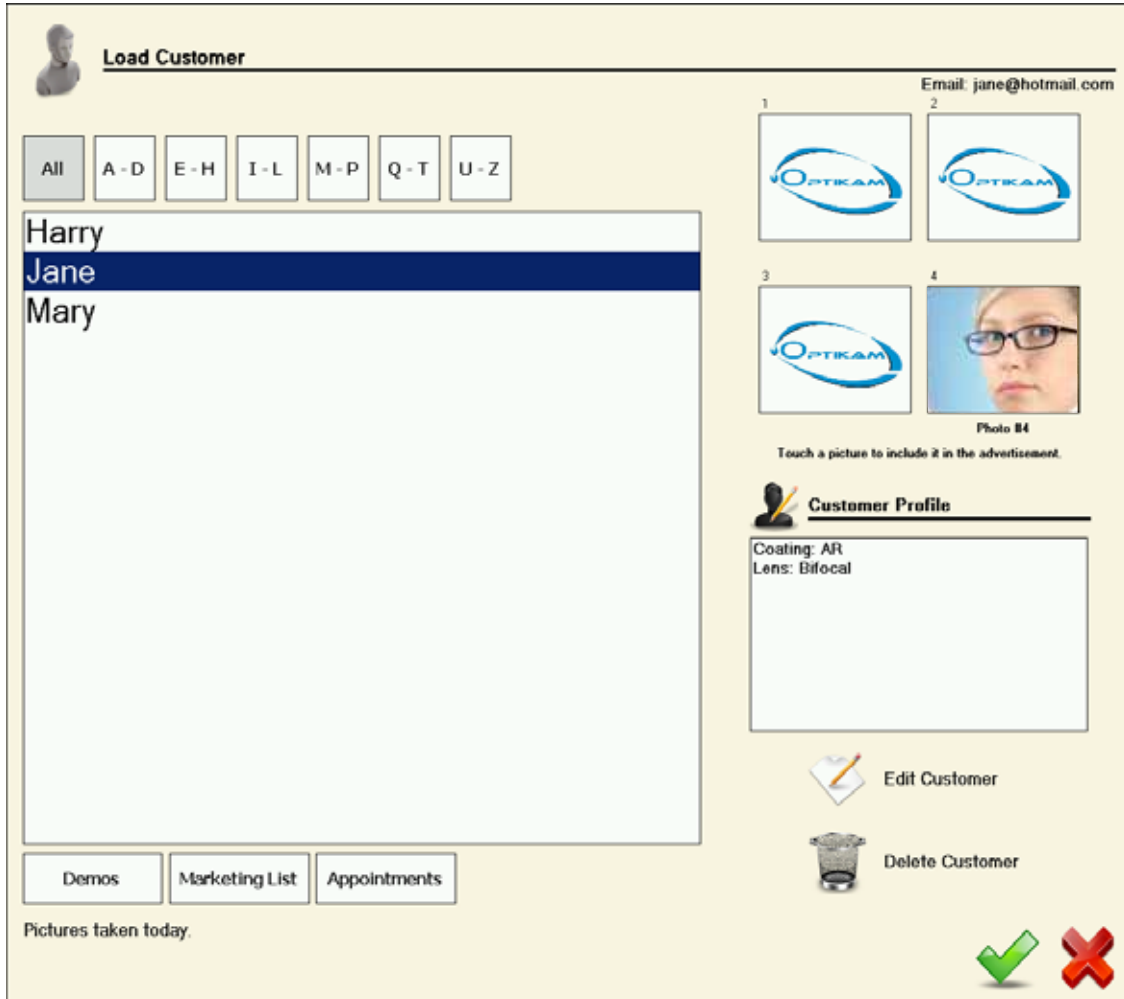

Loading A Customer

A list of all saved customers will be presented to the salesperson. Customers are displayed alphabetically by touching on the buttons displayed above the list of names. Touching the customer name brings up the pictures and profile for that customer.

Customer Profile

The customer's complete profile is displayed in the list titled Customer Profile. All of the options pertaining to the customer are displayed.

Loading A Demo

All saved demos are displayed when the *Demos* button is pressed. This makes it possible to quickly bring up saved demonstrations showcasing the difference between various optional services.

Marketing List

Customers that have agreed to receive marketing emails are displayed when the *Marketing List* button is pressed.

Appointments

All scheduled appointments are viewed by pressing the *Appointments* button.

Advertisement Pictures

As in the Save Customer window, touching on each saved picture will include that picture in the advertisement. Touching on the picture again will remove the picture from the advertisement. A red frame around a picture indicates that it is set to be part of the current advertisement. Touching on a saved picture for 3 seconds or more will make that picture the exclusive picture in the advertisement. An exclusive advertisement picture is indicated by a blue frame. Only one picture at a time can be marked as an exclusive advertisement picture. Touching another saved picture for 3 seconds will automatically clear any previous exclusive picture and make the touched picture the new exclusive picture.

Modifying A Customer

Touching the *Edit Customer* button allows the user to modify the customer file (email address, text descriptions and customer profile).

Removing A Customer

Touching the *Delete Customer* button deletes the customer from the system.

Loading Customer Pictures

 
Touching the green checkmark loads the saved pictures into split-screen mode.

Adding Pictures To Customer File

Pictures can be added to an existing customer file by first loading the pictures into split-screen mode, taking additional pictures and touching the Save button. Once loaded, a customer file is retained until another customer file is loaded, the Clear All button is pressed or the pictures are automatically cleared due to inactivity.

3.3 Marketing Emails

Customers that have agreed to receive marketing emails are displayed when the *Marketing List* button is pressed from the Load Customer window.

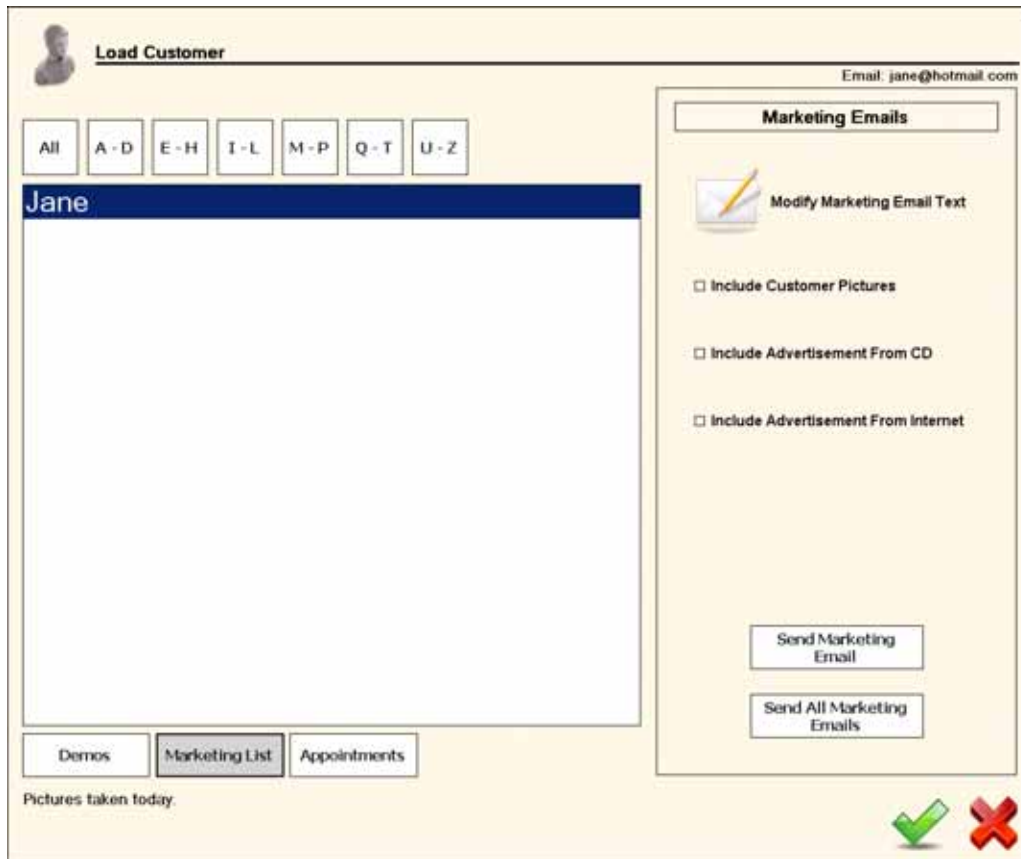

Modifying The Marketing Email

The marketing email subject and text are modified by touching the *Modify Marketing Email Text* button. The standard marketing email subject and text are not replaced. To change the standard marketing email text, touch the Email button in the System Configuration window.

Include Customer Pictures

Selecting the *Include Customer Pictures* option specifies whether the customer's saved pictures are to be included in the marketing email.

Include Advertisement From CD

Selecting the *Include Advertisement From CD* option allows a picture located on a CD inserted in the Optikam system to be included in the marketing email.

Include Advertisement From Internet

Selecting the *Include Advertisement From Internet* option allows a picture from the Internet to be included in the marketing email. An Internet link of a jpeg picture must be provided.

Sending A Marketing Email

The *Send Marketing Email* button sends a marketing email to a specific customer and the *Send All Marketing Emails* button sends a marketing email to the entire list.

3.4 Appointments

All upcoming appointments scheduled for the current week are displayed when the *Appointments* button is pressed from the Load Customer window.

Load Customer Email: jane@hotmail.com

All A-D E-H I-L M-P Q-T U-Z

3/17/2007 10:30 AM: Jane
3/18/2007 12:00 PM: Harry

Appointments

Currently displaying appointments from 3/12/2007 to 3/18/2007

March, 2007

| Sun | Mon | Tue | Wed | Thu | Fri | Sat |
|-----|-----|-----|-----|-----|-----|-----|
| 25 | 26 | 27 | 28 | 1 | 2 | 3 |
| 4 | 5 | 6 | 7 | 8 | 9 | 10 |
| 11 | 12 | 13 | 14 | 15 | 16 | 17 |
| 18 | 19 | 20 | 21 | 22 | 23 | 24 |
| 25 | 26 | 27 | 28 | 29 | 30 | 31 |
| 1 | 2 | 3 | 4 | 5 | 6 | 7 |

Today: 3/17/2007

Select a date to view appointments during that week

Send Reminder Email

Send All Reminder Emails

Demos Marketing List **Appointments**

Pictures taken today.

Appointment Date: Saturday, March 17, 2007 10:30 AM

Viewing Appointments

Appointments are viewed by selecting a date in the calendar located on the right of the window. Selecting a date will display all appointments during that week (Monday to Sunday).

Appointment Reminder Email Text

The appointment reminder email text is set by touching the Email button in the System Configuration window. The subject of the email indicates the date and time of the appointment.

Sending An Appointment Reminder Email

The *Send Reminder Email* button sends an appointment reminder email to a specific customer and the *Send All Reminder Emails* button sends appointment reminder emails to the entire list.

3.5 System Configuration Window

The System Configuration window is accessed by holding for 3 seconds and releasing the Optikam logo located at the bottom-right corner of the screen. The salesperson is prompted to enter the system password before the System Configuration window can be accessed.

System Configuration

1 Camera
 Default Zoom: 2:1 (with minus and plus buttons)

2 Appearance
 Set Logos (Optikam logo)

3 Background Color: SkyBlue

4 Text Color: Black

5 Settings
 Run Advertisement After: Off (with minus and plus buttons)

6 Set Advertisement

7 Date And Time

8 Change Password

9 Upgrade From CD

10 Picture Saving Settings
 Picture Saving
 Save Pictures In Memory: Forever (with minus and plus buttons)

11 Internet
 Configure Internet Connection
 Configure Email Settings

12 Internet Settings
 Email
 Download Screensaver From Internet

13 Printer Settings (Not Available)
 Printing
 Requires Password
 Clear Print Jobs: 0 Print Jobs

14 Online Catalog Settings
 Online Catalog
 Open Catalog On Start
 Edit Online Catalog Address

15 Shutdown

Green checkmark and Red X icons at the bottom right.


v3.0.0 | Wireless MAC: 00:18:F3:75:D2:68 IP:192.168.1.100 | Wireless MAC: 00:D0:D7:02:81:E2 IP:169.254.178.3

The following settings can be configured in the System Configuration window:

1. **Default Zoom:** Set the default zoom value. The zoom values range from 1:1 to 4:1. The zoom is reset to this value when all pictures are cleared.
2. **Set Logos:** Replace the Optikam logos with your own custom logos.
3. **Background Color:** Set the background color of the Optikam graphics.
4. **Text Color:** Set the color of the Optikam text.
5. **Run Advertisement After:** Set the amount of time of inactivity after which the pictures will be cleared and an advertisement will optionally be launched.
6. **Set Advertising:** Customize the advertising displayed when the system is inactive.
7. **Date And Time:** Sets the current date and time. A scheduled daily shutdown time can be set to automatically power off the system at the end of the day. A secondary language can also be selected.
8. **Change Password:** Set a new password. The default password is 'optikam'.
Note: Entering a blank password will remove the password protection feature.
9. **Upgrade From CD:** Update Optikam software with an upgrade CD or an internet link.
10. **Picture Saving Settings:** *Picture Saving* shows or hides the Save and Load buttons on the main screen. *Save Pictures In Memory* sets the number of days to keep saved pictures in the system.
11. **Internet:** *Configure Internet Connection* sets the network type and sets the wireless configuration if available. *Configure Email Settings* sets the email server settings (SMTP, username, password and port number). The MAC and IP addresses are displayed in the bottom-left corner of the System Configuration window.
12. **Internet Options:** *Email* shows or hides the Email button on the main screen. The email subject, message text and sender email address can be modified by checking the *Email* button. The Marketing and Appointment Reminder email texts can also be modified by checking the *Email* button. *Download Screensaver From Internet* turns on or off automatic downloading of an animation or video advertisement. When selected, the *Set Advertising* option is disabled. A valid http internet address of a Flash animation (.swf) or a Movie file (.wmv, .avi or .mpg) must be entered and can be tested by touching the globe icon. A red X indicates a bad link and a green checkmark indicates a successful download.
13. **Printer Settings:** *Printer* shows or hides the Print button in Full-Screen mode. *Requires Password* forces the system password to be entered before printing. *Clear Print Jobs* clears all queued printing jobs. When the Print button is first selected, the user is prompted to enter three lines of 'Print-out Text'. These lines of text are printed on each print-out and may be used to print your company name and contact information.
14. **Online Catalog:** *Online Catalog* shows or hides the Online Catalog button on the main screen. The Online Catalog feature is used to allow customers to interactively browse through a catalog of your products located on a website. *Open Catalog On Start* sets whether the online catalog is to be displayed after touching the Clear All button on the main screen. *Edit Online Catalog Addresses* sets the internet addresses of up to four website catalogs. This feature is only active if an Internet connection is available.
15. **Shutdown:** Turns off Optikam system. The front power button located on the Optikam display can only be used to turn on the Optikam system.

3.6 Set Logos

 
The *Set Logos* button in the System Configuration window allows you to replace the Optikam logos with your own custom logos.

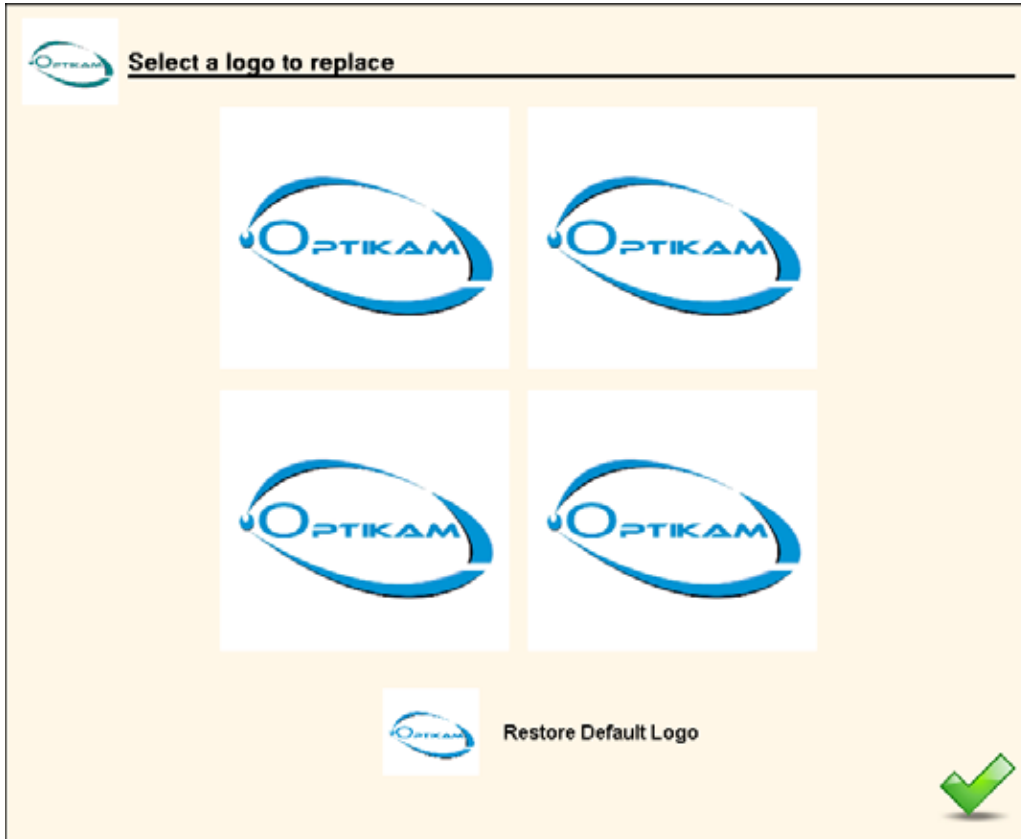

Simply insert a CD containing your JPEG logo file and touch one of the logos in the *Set Logos* window. A list of pictures found on the CD will be displayed. Pictures with an aspect ratio of 5x4 should be used to avoid picture stretching. Once a picture is selected from the list, press the green checkmark to replace the logo. To replace all four logos, select the *Change All Logos* option. To restore the original Optikam logos, press the *Restore Default Logo* button.

3.7 Set Advertising

 The *Set Advertising* button in the System Configuration window customizes the advertising that is displayed when the system is inactive.

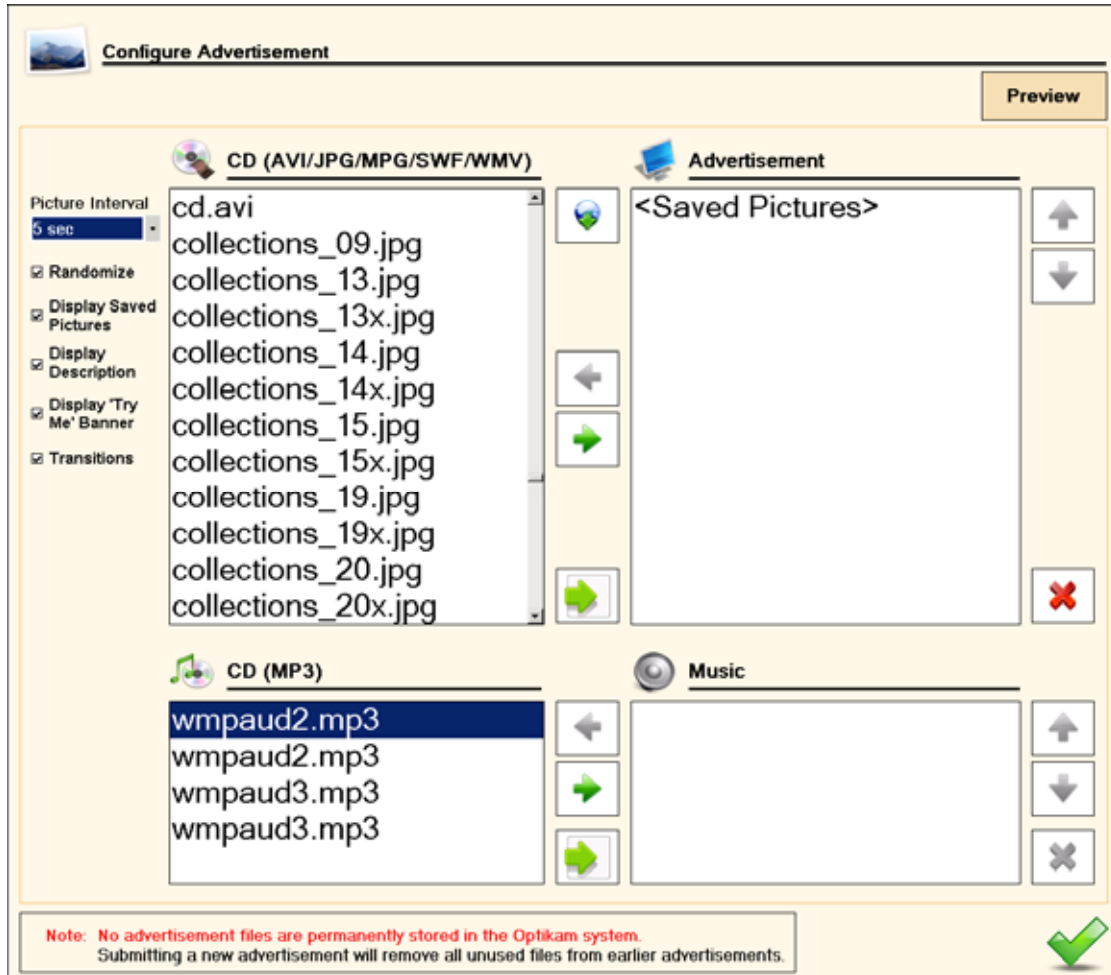

Advertisement Files

Three types of advertisement files are supported by the Optikam system: pictures (JPG), movies (AVI, WMV and MPG) and flash animations (SWF). MP3 background music is also supported. Pictures, movies and animations can be mixed and a custom order of playback can be set. If a flash animation is used, please ensure that your animation is not set to loop in order to effectively use it with other advertisement files.

Advertisement Options

- **Picture Interval:** Sets the length of time to display each picture.
- **Randomize:** Randomly shuffles the playback order.
- **Display Saved Pictures:** Includes saved pictures in advertisement.
- **Display Description:** Displays description text of saved pictures in advertisement.
- **Display 'Try Me' Banner:** Displays the 'Try Me' banner at the bottom of the screen
- **Transitions:** Sets fading effects between pictures.

Selecting Files

The user is presented with a list of files in the box labeled *CD*. These files are located on the CD that is inserted into the Optikam system.

Loading Files

Advertisement files are loaded into the Optikam system by selecting the desired file in the *CD* box and touching the green right-arrow button. All advertisement files are listed in the *Advertisement* box.

Removing Files

Files can be removed from the advertisement by selecting the appropriate file in the *Advertisement* box and touching the green left-arrow button.

Loading All Files

The Load All button located below the green right-arrow button loads all files from the CD to the *Advertisement* box.

Clearing All Files

The red X button clears all files in the *Advertisement* box.

Loading Files From Internet

Advertisement files are loaded from the Internet by touching the globe icon located on the top of the screen. An Internet link to a picture, movie or flash animation file must be provided.

File Sequence

The sequence order of the advertisement files can be altered by touching the green up-arrow and down-arrow buttons.

Previewing The Advertisement

Touching the *Preview* button will display a preview of the created advertisement.

Saving The Advertisement

Touching the green checkmark saves the currently displayed advertisement files into the Optikam system.

Note: No advertisement files are permanently stored in the Optikam system. Submitting a new advertisement will remove all unused files from earlier advertisements.

Chapter 4

4.1 Camera Is Not Detected

You will receive the following message if the camera is not detected.



This error occurs in the following situations:

Camera is off

Verify that the camera light is on (green) on the top of the camera. If the camera is off, hold the power button located on the top of the camera until the camera light turns on (green).

 
Camera switch is in wrong position

Verify that the red/blue switch located on the back of the camera is in the blue position.



Camera cables are disconnected

Verify that both connectors located on the right side of the camera are connected. The red and blue arrows indicate where both connectors are to be connected.

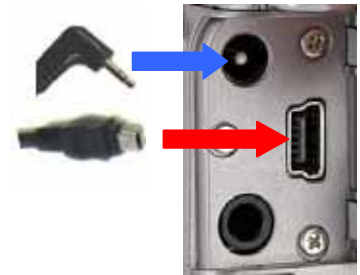

Power cable is disconnected

Verify that the power cable is properly plugged into the outlet.

4.2 Optikam Does Not Turn On

If the Optikam system does not turn on when pressing the front Power button, verify that the Optikam power light is on (red).

If the Optikam power light is NOT on (red):

- Verify that the power cable is properly connected into the outlet.
- Verify that the black connector located at the bottom left side of the monitor is properly connected. The red arrow indicates where the black connector should be connected.



If the Optikam system still does not turn on, please contact your vendor for service.

4.3 Forgot Password

In the event that the password is forgotten, entering 'opti01' as the password will access the setup menu. Once in the setup menu, a new password can be assigned.

4.4 System Stops Responding

If the Optikam system stops responding for any reason, it can be manually shut down by holding down the Optikam power button for 5 seconds. This shut down method should only be used as a last resort.

4.5 Touch-screen Not Working

If the Optikam touch-screen stops working or is misaligned, turn off the camera then touch the screen for 15 seconds. This will bring up the touch-screen calibration window. Touch the X's as they appear on the screen to re-calibrate the touch-screen.



OPTIKAM TECH INC.

787 Liege Street West, Montreal, QC, Canada, H3N 1B1 ☎ Phone: 514-667-4178 Toll Free: 888-356-3311